

# SEVRA

## **Wireless remote controller**

Type T

---

Owner's manual



---

As a result of the continuous development of its products, the manufacturer reserves the right to make changes to the products and to the technical documentation of the device. The functions on the wireless controller may vary depending on the device model.

Please read this manual carefully and follow all the steps contained in it.  
Keep the manual for future reference.

## **TABLE OF CONTENTS**

Safety precautions .....	4
Remote control type T .....	5
Button description .....	6
Battery replacement .....	13
Automatic mode .....	13
Cooling / heating mode .....	13
Fan mode .....	14
Dehumidification mode .....	14

EN

## Safety precautions


1. Before first use of the remote control, install the batteries and make sure that the positive (+) and negative (-) terminals are correctly aligned.
2. Point the remote control directly at the air conditioner receiver. Ensure there are no obstacles between the controller and the receiver, and that the distance does not exceed 8 metres.
3. Do not drop or throw the remote control.
4. Do not allow the remote control to come into contact with liquids.
5. Do not expose the remote control to direct sunlight or excessive heat.
6. If the remote control does not function properly, remove the batteries for 30 seconds and then reinstall them. If this does not work, replace the batteries with new ones.
7. When replacing the batteries, do not mix old and new batteries or batteries of different types, as this may cause the remote control to malfunction.
8. If the remote control will not be used for an extended period, remove the batteries. Battery leakage may damage the remote control.
9. Used batteries should be disposed of properly.

### Note:

- This is a universal remote control that includes all function buttons. Some buttons may not work, depending on the model of the air conditioner purchased. (If a specific function is not available for a particular air conditioner model, pressing the corresponding button on the remote will have no effect.)
- The HEAT and ELE.H functions are not available for cooling-only air conditioner models (the HEAT and ELE.H buttons on the remote will not work for these models).

EN

## Remote control type T:

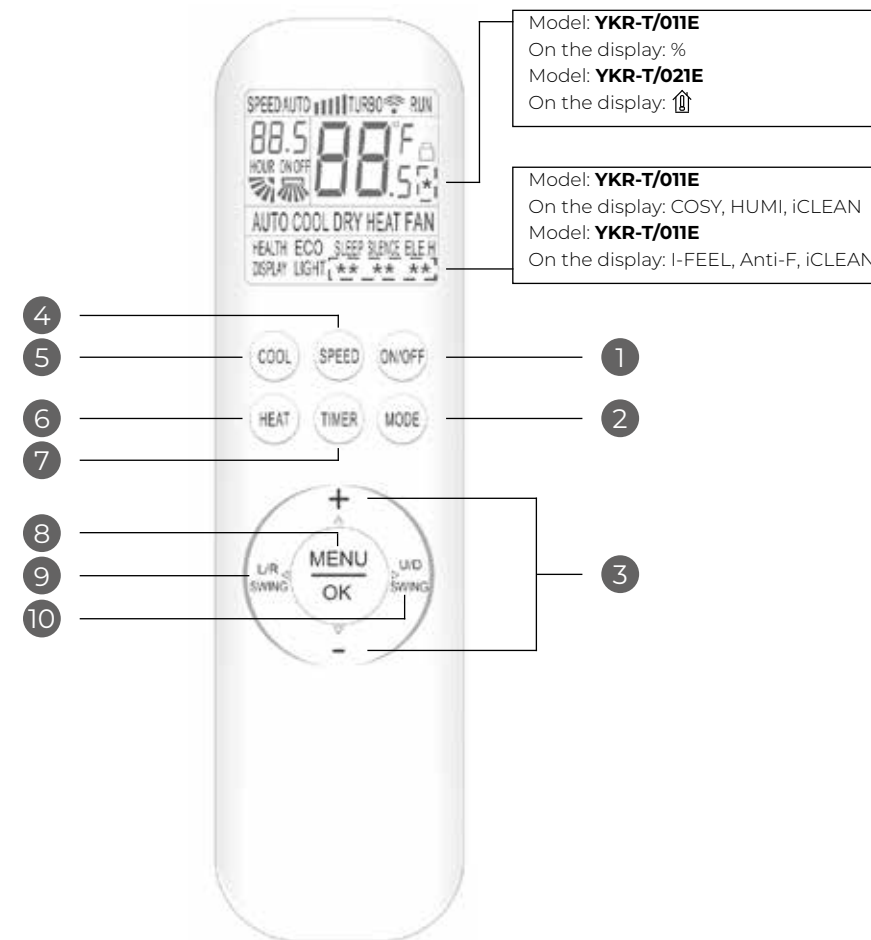

### Note:

The remote control displays all symbols when switched on. At all other times, only the symbols corresponding to the current operating status of the air conditioner are shown.

EN

## Button description

### ① “ON/OFF” button

Press the “ON/OFF” button to turn the unit on or off. When the unit is turned off, any existing timer and night mode settings will be cleared.

### ② “MODE” button

The “MODE” button allows you to select the air conditioner’s operating mode: AUTO, COOL, DRY, HEAT, FAN – as follows:



Each time the button is pressed, the air conditioner’s operating mode will change.

**Note: The HEAT mode is not available for cooling-only air conditioner models.**

### ③ “+/-” button

Press the “+ / -” buttons to increase or decrease the temperature. Each press of the “+” button will raise the set temperature by 1°C (1°F), and each press of the “-” button will lower it by 1°C (1°F). The temperature can be set within the range of 16°C (60°F) to 32°C (90°F).

**Note: In AUTO mode and FAN mode, the temperature cannot be set.**

### ④ “SPEED” button

Press the “SPEED” button to select the fan speed from the following options: Low, Mid, High, Turbo, Auto.



**Note: The automatic fan speed “Auto” is not available in FAN mode. In DRY mode, the fan speed cannot be adjusted.**

EN

### ⑤ “COOL” button

Press the “COOL” button to directly activate cooling mode.

### ⑥ “HEAT” button

Press the “HEAT” button to directly activate heating mode.

**Note: The HEAT mode is not available for cooling-only air conditioner models.**

### ⑦ “TIMER” button

The button is used to set the timer function – the time to turn the unit on or off. When the unit is on, press the “TIMER” button to set the off time; when the unit is off, press the “TIMER” button to set the on time.

Pressing the button once will make the “ON (OFF)” indicator on the remote display start flashing, depending on whether the air conditioner is off (for ON) or on (for OFF). Press the “+” or “-” buttons to set the number of hours after which the unit will turn on or off. The timer can be set from 0.5 to 24 hours, in 0.5-hour increments. Press the “TIMER” button again to confirm the settings. The “ON (OFF)” indicator will stop flashing.

If the “ON (OFF)” indicator is not confirmed by pressing the “TIMER” button within 10 seconds of starting to flash, the controller will automatically exit the timer setting mode without saving the settings.

Once the timer settings have been confirmed, pressing the “TIMER” button again will cancel them.

### ⑧ “MENU/OK” button

Press the “MENU” button to enter function selection mode. Press the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select a function. Press the “OK” button to activate the selected function.

In function selection mode, when pressing  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  the icon corresponding to the selected function will flash on the display if the function is available for the purchased air conditioner model.

### ⑨ “L/R SWING” button

Press the “L/R SWING” button to activate the automatic movement of the vertical air flow louvers (left-right swing). Press the button again to set the louver position.

EN

### 10 “U/D SWING” button

Press the “U/D SWING” button to activate the automatic movement of the horizontal air flow louver (up-down swing). Press the button again to set the louver position.

**Note:** When the unit is on, press and hold the “U/D SWING” button for 3 seconds. The button will switch to the “RATED SWING” function – the horizontal louver will move automatically up and down within a selected, pre-set angle range. Press the “U/D SWING” button again to choose the louver position.

The button will return to its original function only by pressing and holding the “U/D SWING” button for 3 seconds again or by reinstalling the batteries in the remote control.

Pressing the ON/OFF button will not deactivate the “RATED SWING” function.

### HEALTH function

Setting the HEALTH function:

When the unit is on, press the “MENU” button, then use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “HEALTH” icon on the display. When the “HEALTH” icon starts flashing, press the “OK” button to activate the HEALTH function – the icon will remain steadily lit. To turn off the HEALTH function, press the “MENU” button and use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “HEALTH” icon on the display. When the “HEALTH” icon starts flashing, press the “OK” button – the function will be deactivated and the “HEALTH” icon will go out.

### ECO function

The ECO energy-saving function limits the air conditioner’s power consumption. The ECO function operates only in cooling mode. The ECO function will automatically turn off 8 hours after activation.

Setting the ECO function:

In cooling mode, press the “MENU” button, then use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “ECO” icon on the display. When the “ECO” icon starts flashing, press the “OK” button to activate the ECO function – the icon will remain steadily lit.

To turn off the ECO function, press the “MENU” button and use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “ECO” icon on the display. When the “ECO” icon starts flashing, press the “OK” button – the function will be deactivated and the “ECO” icon will go out.

EN

**Note:** The air conditioner’s power consumption depends on the outdoor temperature, the size of the cooled area, and other factors. If the outdoor temperature is high or the room being cooled is large, exercise caution when using the ECO energy-saving function.

### SLEEP function

Setting the SLEEP function:

When the unit is on, press the “MENU” button, then use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “SLEEP” icon on the display. When the “SLEEP” icon starts flashing, press the “OK” button to activate the SLEEP function – the icon will remain steadily lit. To turn off the SLEEP function, press the “MENU” button and use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “SLEEP” icon on the display. When the “SLEEP” icon starts flashing, press the “OK” button – the function will be deactivated and the “SLEEP” icon will go out. The SLEEP function will automatically turn off after 10 hours of continuous operation, and the unit will return to the previous operating mode settings. The SLEEP function is not available in AUTO mode or FAN mode. When the SLEEP function is active, the display on the indoor air conditioner unit will be turned off.

### SILENCE function

Setting the additional electric heater (ELE.H) function:

When the unit is operating in heating mode, press the “MENU” button, then use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “ELE.H” icon on the display. When the “ELE.H” icon starts flashing, press the “OK” button to activate the auxiliary electric heater ELE.H – the icon will remain steadily lit.

To turn off the auxiliary electric heater ELE.H, press the “MENU” button and use the  $\nabla, \Delta, \triangleleft, \text{or} \triangleright$  buttons to select the “ELE.H” icon on the display. When the “ELE.H” icon starts flashing, press the “OK” button – the function will be deactivated and the “ELE.H” icon will go out.

The unit will automatically activate the additional electric heater function in low outdoor temperatures to accelerate heating.

**Note:** Cooling-only models do not have the additional electric heater function.

EN

### DISPLAY function

Turning the indoor unit display on/off – Setting the DISPLAY function: Press the “MENU” button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “DISPLAY” icon on the display. When the “DISPLAY” icon starts flashing, press the “OK” button to turn on the indoor unit display – the “DISPLAY” icon will remain steadily lit.

To turn off the indoor unit display, press the “MENU” button and use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “DISPLAY” icon on the display. When the “DISPLAY” icon starts flashing, press the “OK” button – the display function will be turned off and the “DISPLAY” icon will go out.

### LIGHT function

Light detection function “LIGHT” – the air conditioner will automatically turn the indoor unit display on or off depending on the room’s light intensity. Setting the LIGHT function: When the unit is on, press the “MENU” button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “LIGHT” icon on the display. When the “LIGHT” icon starts flashing, press the “OK” button to activate the light detection function – the “LIGHT” icon will remain steadily lit.

To turn off the LIGHT function, press the “MENU” button and use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “LIGHT” icon on the display. When the “LIGHT” icon starts flashing, press the “OK” button – the function will be deactivated and the “LIGHT” icon will go out.

**Note: The LIGHT function is not available on air conditioners sold in the European market.**

### HUMI function (only YKR-T/011E)

Setting the HUMI (humidification) function: Press the “MENU” button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “HUMI” icon on the display. When the “HUMI” icon starts flashing, press the “OK” button to activate the humidification function – the “HUMI” icon will remain steadily lit.

To turn off the HUMI function, press the “MENU” button and use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “HUMI” icon on the display. When the “HUMI” icon starts flashing, press the “OK” button – the function will be deactivated and the “HUMI” icon will go out.

**Note: The humidification function is not available in DRY mode.**

EN

### COSY function (only YKR-T/011E)

Setting the COSY (comfortable airflow) function:

When the air conditioner is operating in cooling mode, press the “MENU” button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “COSY” icon on the display. When the “COSY” icon starts flashing, press the “OK” button to activate the comfortable airflow function – the “COSY” icon will remain steadily lit.

To turn off the COSY function, press the “MENU” button and use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “COSY” icon on the display. When the “COSY” icon starts flashing, press the “OK” button – the function will be deactivated and the “COSY” icon will go out. Activating the COSY function will set the fan speed to AUTO and disable the SWING function.

Turning off the air conditioner, changing the operating mode, activating the SLEEP function, changing the fan speed, or activating the SWING function will automatically turn off the COSY function and restore the previous settings.

### iCLEAN function

iCLEAN self-cleaning function – the unit automatically cleans dust and dries moisture from the evaporator surface.

Setting the iCLEAN self-cleaning function:

When the air conditioner is turned off, press the “MENU” button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the “iCLEAN” icon on the display. When the “iCLEAN” icon starts flashing, press the “OK” button to activate the self-cleaning function – the “iCLEAN” icon will remain steadily lit.

The self-cleaning function will automatically turn off after 30 minutes.

### Child-Lock safety function

To turn the Child-Lock function on or off, press and hold the “HEAT” and “MODE” buttons simultaneously for at least 3 seconds. When the Child-Lock is activated, a closed padlock icon will appear on the remote control display.

EN

**ANTI-F function** (only YKR-T/021E)


Anti-F (mould prevention) function – after operating in cooling, DRY, or AUTO mode and being turned off, the air conditioner will automatically dry moisture accumulated on the indoor unit's evaporator to prevent the growth of mould, fungi, and unpleasant odours. The drying process lasts approximately 3 minutes.

Setting the Anti-F function:

When the air conditioner is turned off, press the "MENU" button, then use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the "Anti-F" icon on the display. When the "Anti-F" icon starts flashing, press the "OK" button to activate the mould prevention function – the "Anti-F" icon will remain steadily lit.

To turn off the Anti-F function, press the "MENU" button and use the  $\nabla$ ,  $\Delta$ ,  $\triangleleft$ , or  $\triangleright$  buttons to select the "Anti-F" icon on the display. When the "Anti-F" icon starts flashing, press the "OK" button – the function will be deactivated and the "Anti-F" icon will go out.

EN

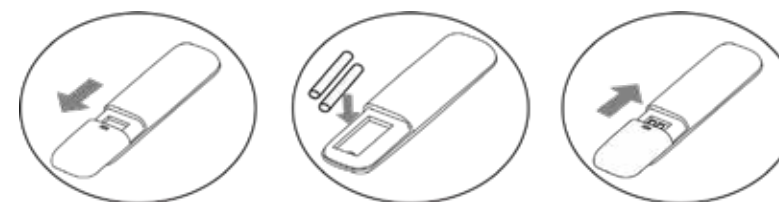**Battery replacement**

1. Slide the battery cover, located over the battery compartment, in the direction indicated by the arrow.
2. Insert two new AAA 1.5V batteries, ensuring that the positive (+) and negative (-) terminals are correctly aligned.
3. Reattach the battery cover.

**Automatic operation mode**

1. Press the "ON/OFF" button on the remote control to turn on the air conditioner.
2. Press the "MODE" button and select the AUTO mode.
3. Use the "SPEED" button to choose the fan speed: LOW, MID, HIGH, or AUTO.
4. Press the "ON/OFF" button again to turn off the air conditioner.

**Cooling / Heating mode**

1. Press the "ON/OFF" button on the remote control to turn on the air conditioner.
2. Press the "MODE" button and select COOL for cooling or HEAT for heating.
3. Use the "+" and "-" buttons to set the air flow temperature. The temperature can be adjusted in 1°C increments from 16°C (60°F) to 32°C (90°F).
4. Press the "SPEED" button to select the fan speed: LOW, MID, HIGH, TURBO, or AUTO.
5. Press the "ON/OFF" button again to turn off the air conditioner.

**Note: The HEAT mode is not available for cooling-only air conditioner models.**

EN

**FAN mode**

Press the "ON/OFF" button on the remote control to turn on the air conditioner.

Press the "MODE" button and select FAN mode.

Use the "SPEED" button to choose the fan speed: LOW, MID, or HIGH.

Press the "ON/OFF" button again to turn off the air conditioner.

**Note: In FAN mode, the temperature cannot be adjusted.**

**Dehumidification mode (DRY)**

Press the "ON/OFF" button on the remote control to turn on the air conditioner.

Press the "MODE" button and select DRY mode.

Use the "+" and "-" buttons to set the air flow temperature.

The temperature can be adjusted in 1°C increments from 16°C (60°F) to 32°C (90°F).

Press the "ON/OFF" button again to turn off the air conditioner.

**Note: In dehumidification DRY mode setting fan speed is not possible.**


# SEVRA

Exclusive distributor of the SEVRA brand in Poland:  
**WIENKRA Sp. z o. o.**


 [www.wienkra.pl](http://www.wienkra.pl)  [www.sevra.pl/en](http://www.sevra.pl/en)


**Cracow:**

 34 Kotlarska street, 31-539 Cracow

 [wienkra@wienkra.pl](mailto:wienkra@wienkra.pl)


**Warsaw - Janki:**

 15 Sokolowska street, 05-090 Warsaw

 [wienkra-waw@wienkra.pl](mailto:wienkra-waw@wienkra.pl)

**Wroclaw:**

 61 Armii Krajowej avenue, 50-541 Wroclaw

 [wienkra-wro@wienkra.pl](mailto:wienkra-wro@wienkra.pl)