SEVRA

Wireless remote controller

Type H

Owner’s manual

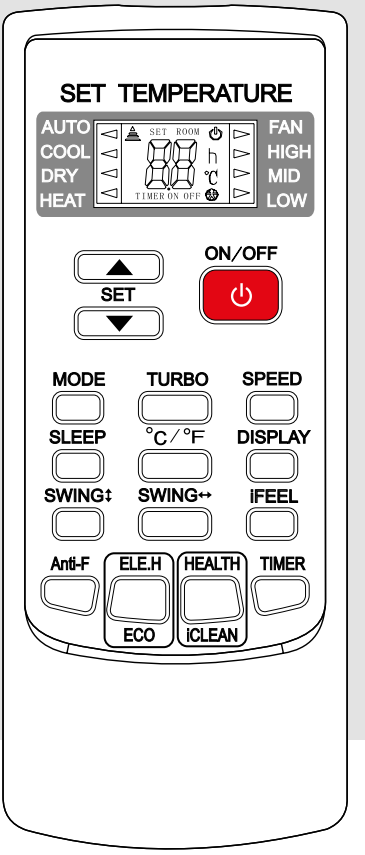

As a result of the continuous development of its products, the manufacturer reserves the right to make changes to the products and to the technical documentation of the device. The functions on the wireless controller may vary depending on the device model.

Please read this manual carefully and follow all the steps contained in it. Keep the manual for future reference.

TABLE OF CONTENTS

Safety precautions 4
Buttons description 5
Usage 10
Battery replacement 10
Backlit function 11
Automatic operation mode 11
Cooling / heating mode 11
Fan mode 12
Drying mode 12

EN

Safety precautions

1. Before using the remote control for the first time, install the batteries and make sure that the positive terminals (marked “+”) and negative terminals (marked “–”) are correctly positioned.
2. Point the remote control directly at the air conditioner receiver. Ensure that there are no obstacles between the remote and the receiver and that the distance does not exceed 8 metres.
3. Do not drop or throw the remote control.
4. Do not allow the remote control to get wet.
5. Do not expose the remote control to direct sunlight or excessive heat.
6. If the remote control does not work properly, remove the batteries for 30 seconds and reinstall them. If this does not work, replace the batteries with new ones.
7. When replacing batteries, do not mix new and old batteries or batteries of different types, as this may cause the remote control to malfunction.
8. If the remote control will not be used for a long period, remove the batteries. Battery leakage may damage the remote control.
9. Used batteries should be disposed of properly.

Note:

This is a universal remote control that includes all function buttons. Some buttons may not work depending on the model of the air conditioner purchased. (If a specific function is not available for a particular air conditioner model, pressing the corresponding button on the remote will not cause the device to respond.)
The HEAT and ELE.H functions are not available for air conditioner models with cooling-only functionality (the HEAT and ELE.H buttons on the remote will not work for these models).

EN

Buttons description

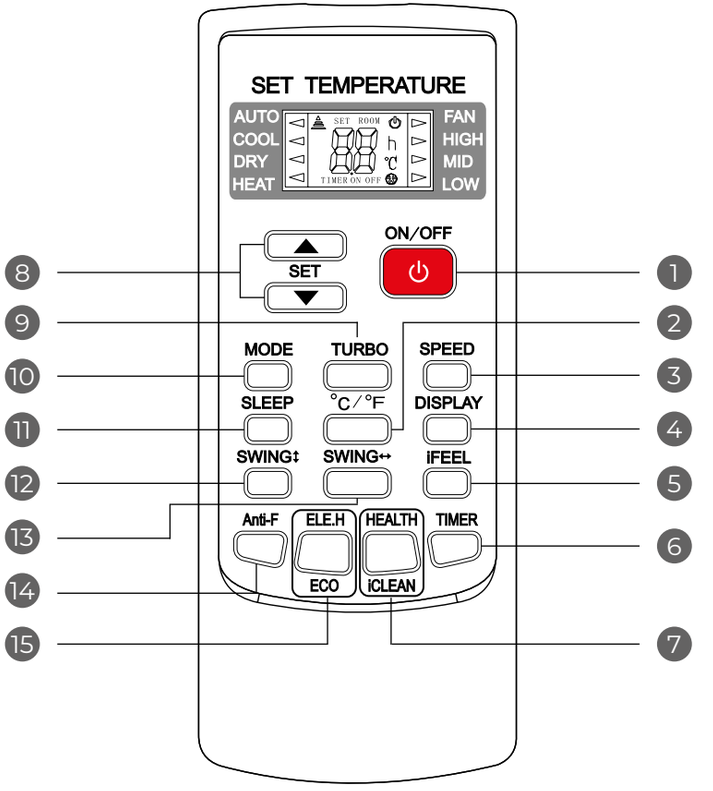

Note:

The remote control displays all symbols when switched on. At all other times, only the symbols corresponding to the current operating status of the air conditioner are shown.

Button description

① “ON/OFF” button

Press the “ON/OFF” button to turn the unit on / off. After turning off the device, the existing timer and sleep mode settings are cleared.

② “°C/ °F” button

Press this button to switch the temperature display to Fahrenheit (by default, the temperature is displayed in Celsius). The “C” icon will not be shown on the LCD screen.
Press this button again to restore the temperature display to Celsius.

Note: Temperature display in Fahrenheit is not available for all models.

③ “SPEED” button

Press the SPEED button to select the fan speed from the following options:

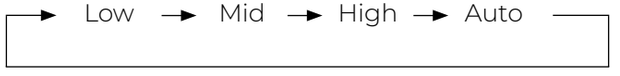

Note: The automatic fan speed “Auto” is not available in fan mode.

④ “DISPLAY” button

The DISPLAY button is used to turn the indoor unit’s display on or off.

⑤ “iFEEL” button

When this function is activated, the current room temperature will appear on the display. After turning off the iFEEL function on the remote, the temperature set by the user will be displayed.

Note: This function is not available in fan mode.

⑥ “TIMER” button

The button is used to set the timer function – the time to turn the unit on or off.
When the unit is on, press the “TIMER” button to set the turn-off time; when the unit is off, press the “TIMER” button to set the turn-on time.
After pressing the button once, “ON (OFF)” will start flashing on the remote display if the air conditioner is off (on). Press the “▲” or “▼” button to set the number of hours after which the unit will turn on / off. The air conditioner’s on/off time can be set from 0.5 to 24 hours, in 0.5-hour increments.
Press the “TIMER” button again to confirm the settings. “ON (OFF)” will stop flashing on the display.
If the “ON (OFF)” icon continues flashing for 10 seconds without confirming the settings by pressing the “TIMER” button, the controller will automatically exit the setting mode without saving them.
If the timer settings have been confirmed, pressing the “TIMER” button again will cancel them.

⑦ “HEALTH” button

Note: This button has two functions.

Pressing this button while the air conditioner is on activates functions related to health, such as ionization (depending on the air conditioner’s equipment).
Press this button again to turn off the HEALTH function.

“iCLEAN” button

Pressing this button while the air conditioner is on will display the message “CL” and activate the iCLEAN self-cleaning function — the unit will automatically clean dust and moisture from the evaporator surface to improve cooling and heating performance. The iCLEAN function lasts about 30 minutes, during which the device remains on. Pressing the iCLEAN button again will turn off this function.

⑧ “▲/▼” button

Each time the „▲” is pressed, the temperature setting will increase by 1°C (1°F) and each time the „▼” is pressed, it will decrease by 1°C (1°F).

a) If the type of controller remote is YKR-H/101E or YKR-H/102E, setting temperature range is 16°C~32°C (60°F~90°F).
b) If the type of controller remote is YKR-H/132E, setting temperature range is 20°C~28°C (68°F~82°F).
c) Some areas don’t have the YKR-H/132E. Local regulation and actual object shall prevail.

Note: The temperature cannot be set in AUTO or FAN mode, thus these two buttons are not functional.

⑨ “TURBO” button

Press this button only in COOL or HEAT mode to set TURBO on or off to speed up the cooling or heating.
When TURBO is on, the air speed is HIGH.
When TURBO is off, the air speed will restore to previous status.

⑩ “MODE” button

Press this button, you can select the running mode as follows:

→ Auto → Cool → Dry → Heat → Fan →

Note: HEAT mode is not available for cool-only units.

⑪ “SLEEP” button

Setting the SLEEP mode function:

1. After pressing the SLEEP button on the unit, a blinking LED will appear, indicating that the function is activated.
2. When activated in cooling mode, the air conditioner will automatically increase the temperature by 1 °C after 1 hour of operation and by another 1 °C in the following hour.
3. When activated in heating mode, the air conditioner will automatically decrease the temperature by 2 °C after 1 hour of operation and by another 1 °C in the following hour.
4. The SLEEP function remains active for 7 hours, after which the unit will turn off automatically.

Note: Pressing the MODE or ON/OFF button will deactivate the SLEEP function.

⑫ “SWING ↕” button

Button that activates the automatic horizontal louvre movement function (moves in the vertical direction).
Pressing the button again stops the louvre at the set position.

⑬ “SWING ↔” button

Button that activates the automatic vertical louvre movement function (moves in the horizontal direction).
Pressing the button again stops the louvre at the set position.

⑭ “ANTI-F” button

Anti-F mould prevention function – after extended operation in cooling, dehumidifying, or automatic mode and after switching off, the air conditioner will automatically dry the moisture accumulated on the indoor unit’s evaporator to prevent the growth of mould, fungi, and unpleasant odours that are harmful to health. The drying process lasts approximately 3 minutes.

This function is not set by default. You can activate or cancel it at any time as follows:
With the unit and remote control on, point the remote at the unit and press the “Anti F” button once – the buzzer will sound twice, five times in total, indicating that the function is activated.
Once set, the function remains active until it is cancelled or the unit is switched off due to a power interruption.
Cancelling the Anti-F function:

1. Switch off the unit.
2. With the unit and remote control off, point the remote at the unit and press the “Anti F” button once – the buzzer will sound 5 times and then 3 times, indicating that the function has been cancelled.

Note: After activating the Anti-F function, it is not recommended to switch on the unit before it has been completely turned off. The Anti-F function will be inactive if the unit’s off timer is set.

⑮ **“ELE.H” button**

Note: This button has two functions.

If this button is pressed in heating mode, the additional electric heater will be turned on/off.
Note: Active only in units equipped with built-in additional electric heaters.

“ECO” button

If this button is pressed in cooling mode, the unit will start operating in ECO mode, with the lowest power consumption, and will automatically turn off after 8 hours.
Changing the operating mode or turning off the unit with the remote control will automatically disable the ECO function.
Press the “ECO” button again in ECO mode to turn this mode off.

Note: ECO mode works only for inverter units.

Battery replacement

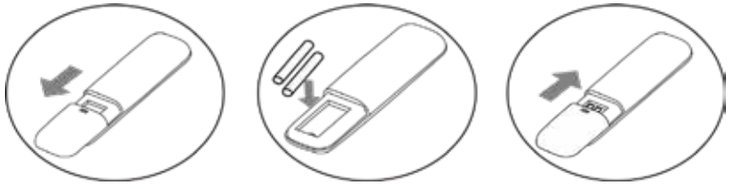

1. Slide the cover under which the batteries are installed in the direction indicated by the arrow.
2. Insert two new batteries (type AAA, 1.5V). Make sure the positive (+) and negative (–) poles are positioned correctly.
3. Reattach the battery cover.

Backlit Function (only for remote controls with this feature)

The remote control has a backlit, which can be turned on by pressing any button for convenient operation in the dark. The backlit will automatically turn off if no operation is performed within 10 seconds.

Automatic operating mode

1. Press the “ON/OFF” button on the remote control to turn on the air conditioner.
2. Press the “MODE” button and select the automatic mode AUTO.
3. By pressing the “SPEED” button you can select the fan speed: LOW, MID, HIGH, AUTO.
4. Press the “ON/OFF” button again to turn off the air conditioner.

Note: In automatic mode AUTO, the temperature cannot be adjusted.

Cooling / Heating Mode

1. Press the “ON/OFF” button on the remote control to turn on the air conditioner.
2. Press the “MODE” button and select cooling mode COOL or heating mode HEAT.
3. By pressing the “▲“, “▼“ buttons, set the desired temperature. The temperature can be set in 1°C increments within the range of 16°C (60°F) to 32°C (90°F).
4. By pressing the “SPEED” button you can select the fan speed: LOW, MID, HIGH, AUTO.
5. Press the “ON/OFF” button again to turn off the air conditioner.

Note: Heating mode HEAT is not available for air conditioner models with only cooling function.

Fan mode

1. Press the “ON/OFF” button on the remote control to turn on the air conditioner.
2. Press the “MODE” button and select fan mode FAN.
3. By pressing the “SPEED” button you can select the fan speed: LOW, MID, HIGH.
4. Press the “ON/OFF” button again to turn off the air conditioner.

Note: In fan mode FAN, the temperature cannot be adjusted.

Dehumidification mode

1. Press the “ON/OFF” button on the remote control to turn on the air conditioner.
2. Press the “MODE” button and select dehumidification mode DRY.
3. By pressing the “▲“, “▼“ buttons, set the desired temperature. The temperature can be set in 1°C increments within the range of 16°C (60°F) to 32°C (90°F).
4. Press the “ON/OFF” button again to turn off the air conditioner.

Note: In dehumidification mode, fan speed adjustment is not possible.

SEVRA

Exclusive distributor of the SEVRA brand in Poland:
WIENKRA Ltd.

www.wienkra.pl www.sevra.pl/en

Cracow:
34 Kotlarska street, 31-539 Cracow
20G Rzemieslnicza street, 30-347 Cracow
wienkra@wienkra.pl

Warsaw - Janki:
15 Sokolowska street, 05-090 Warsaw
wienkra-waw@wienkra.pl

Wroclaw:
61 Armii Krajowej avenue, 50-541 Wroclaw
wienkra-wro@wienkra.pl